

**Ersatzteilverzeichnis P52/17-800**  
**Spare Parts List**


**Best.-Nr.: 00.5168**  
**Code Nr.**

Lfd. Nr. Item No.	Stückzahl No. Off	Best.-Nr. Code No.	Benennung	Description
1	1	01.0608	Antriebsgehäuse	Crankcase
2	1	00.2914	Ölauffüllstopfen kpl.	Oil Filler Plug Assy
4	1	03.0274	Getriebedeckel	Crankcase Cover
5	1	06.0103	O-Ring zu 4	O-Ring for 4
6	1	00.2416	Ölschauglas kpl.	Oil Sight Glass Assy
8	1	00.4502	Ölmeßstab kpl.	Oil Dipstick Assy
9	1	06.0053	O-Ring zu 8	O-Ring for 8
10	4	21.0026	Zylinderschraube	Cylinder Screw
11	5	07.2994	Federring	Spring Ring
12	1	07.0705	Stopfen G1/2	Plug G1/2
13	1	06.0282	Dichtung	Gasket
14	2	03.0137	Lagerdeckel	Bearing Cover
15	2	06.0101	Radialwellendichtring	Radial Shaft Seal
16	2	06.0104	O-Ring zu 14	O-Ring for 14
17	8	21.0034	Sechskantschraube	Hexagon Screw
20	2	05.0096	Kegelrollenlager	Taper Roller Bearing
20A	1-3	07.0789	Paßscheibe	Fitting Disc
20B	1-3	07.2844	Paßscheibe	Fitting Disc
21	1	07.4563	Wellenschutz	Shaft Protector
21A	1	07.4687	Wellenschutzhalter	Shaft Guard Holder
22	1	11.0657	Kurbelwelle	Crankshaft
23	1	07.3188	Paßfeder	Fitting Key
24	3	00.4391	Gleitlagerpleuel kpl.	Connecting Rod Assy
25	3	00.4392	Kreuzkopf kpl.	Crosshead / Plunger Assy
28	3	11.0659	Kreuzkopfbolzen	Crosshead Pin
29	3	00.5166	Plunger kpl.	Plunger Assy
30	3	07.3095	Ölabstreifer	Oil Scraper
31	3	06.0270	Radialwellendichtring	Radial Shaft Seal
32	3	07.3372	Seegerring	Clip Ring
33	3	07.3738	Stützscheibe	Support Disc
•35	3	06.1334	Nutring	Grooved Ring
36	3	07.3733	Dichtungshülse	Seal Sleeve
36A	1	07.3910	Gummi Stopfen	NBR Plug
37A	2	07.2947	Rohrbogen für Spülleitung	Elbow for Rinsing Pipe
37B	4	07.2949	gerade Einschraubverschraubung	Screw-In Pipe Connection
37C	2	07.3547	Stopfen G1/8 m. Innensechskant	Plug G1/8 c/w Hexagon
37D	6	06.0305	Stahl-Dichtring	Steel Washer
•38	3	07.3799	Führungsring	Sleeve Support Ring
•39	3	06.1400	Doppelwendelring	Spiral Ring
40	3	07.3735	Stützring	Support Ring
41	3	07.3737	Dichtungsspannfeder	Seal Tension Spring
42	3	07.3703	Federspannring	Spring Tension Ring
•43	3	06.1389	Dichtkantenring	Border Seal Ring
44	3	07.3679	LRF-Ring	Drip-Return Ring
•45	6	06.1369	O-Ring	O-Ring
46	3	07.3119	Dichtungskassette	Seal Case
•47	3	06.0105	O-Ring	O-Ring
••48	3	07.2758	Ventilfeder	Valve Spring
••49	3	07.3120	Saugventilplatte	Suction Valve Plate
••50	3	07.3117	Ventilkörper	Valve Body
••51	3	06.0247	O-Ring	O-Ring
••52	3	06.1348	Stützring für O-Ring	Support Ring for O-Ring
••53	3	06.1388	Dichtkantenring	Border Seal Ring
54	1	01.0710	Ventilgehäuse	Valve Casing
••55	3	07.3167	Federführung	Spring Guide
••56	3	07.4900	Ventilfeder	Valve Spring
••57	3	07.3121	Druckventilplatte	Discharge Valve Plate
58	8	21.0528	Stiftschraube	Stud Bolt
59	8	07.3229	Sechskantmutter	Hexagon Screw
60	1	07.0796	Scheibe für Kurbelwelle	Disc for Crankshaft
61	1	21.0259	Sechskantschraube	Hexagon Screw
62	2	07.4375	Stopfen G1/2	Plug G1/2
63	2	06.0742	Cu-Dichtring	Copper Ring
64	2	07.4095	Dichtkegel	Seal Cone
65	1	07.4108	Stopfen G1/2 Druck	Plug G1/2 Discharge
66	1	07.0705	Stopfen G1/2 Saug	Plug G1/2 Suction
67	1	06.0282	Cu-Dichtring	Copper Ring
		00.5224	Antrieb kpl.(1-28/30/31/58-61)	Crankcase Assy (1-28/30/31/58-61)
		00.5227	Plungerwechselsatz (29/32-3x45)	Plunger Replacement Kit (29/32-3x45)
		00.5226	Pumpenkopf (3x45-57/62/63/65/66/67)	Pumphead Assy (3x45-57/62/63/65/66/67)
•		14.0589	Rep.Satz Dichtungen	Seal Repair Kit
••		14.0587	Rep. Satz Ventile	Valve Repair Kit

Bei Bestellung von Ersatzteilen bitte Bestell-Nr., Pumpen-Nr. und -type angeben  
 When ordering please state Code No., Pump Model and Pump Serial No.

**Achtung!** Die Ventilstopfen (62/65/66 und der Hochdruckfitting 07.4368) aus Edelstahl neigen beim Herausschrauben zum Fressen im Gewinde des Gehäuses. Vor dem Herausdrehen die Stopfen durch 1-2 Schläge mit einem Eisenhammer auf den Sechskant prellen, um Spannungen zu lösen. Vor Wiedereinbau Gewinde mit „Antiseize“ z.B. ProPack 550 schmieren.

**Important!** The stainless steel valve plugs (62/65/66 and the high pressure connection 07.4368) can seize when being screwed out of the casing. To release tension beforehand, strike the plugs 1-2 times with a steel hammer on the top before screwing them out. Coat threads with antiseize (e.g. ProPack 550) before refitting.

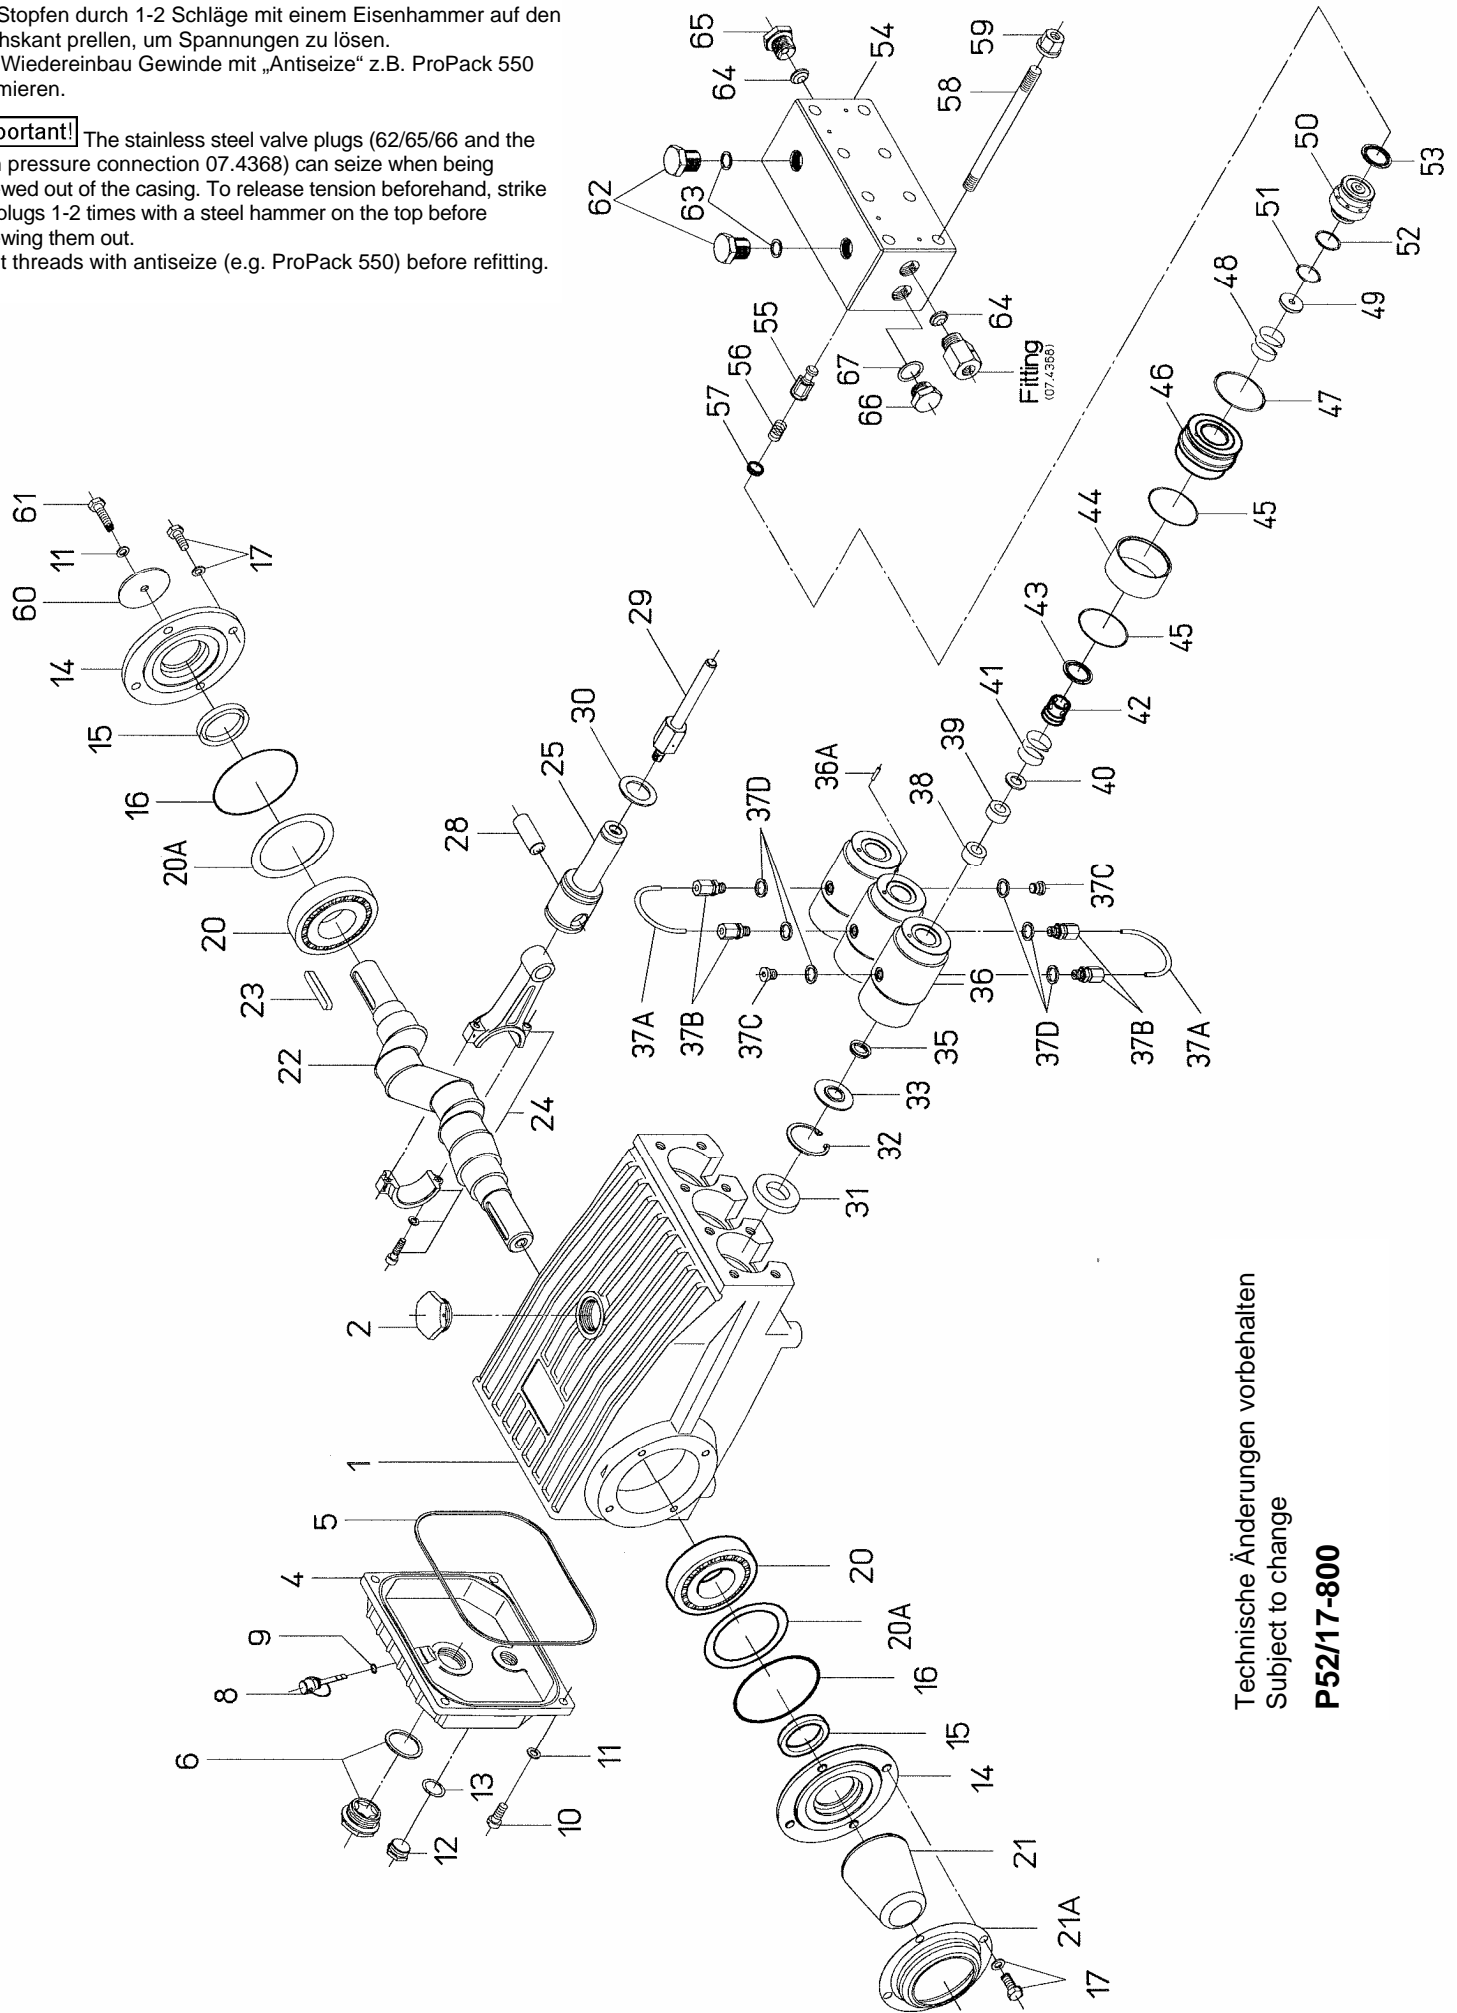

Technische Änderungen vorbehalten  
Subject to change

**P52/17-800**